

Verwendungsliste nach Fahrzeugen
Application list by vehicle

trail master[®]
by **Maas**



trail master[®]
by Maas



Focus on the essentials



suspension system +40/+60mm HD
for Nissan Navara D40

More informations under: www.trailmaster.de

AMC Jeep

CJ5/CJ7

Asia

Rocsta

Chevrolet/GMC

Blazer, Jimmy, Suburban
½ ton

Blazer, Jimmy, S-Serie
Blazer, Yukon, Tahoe,
Suburban, K1500

Pickup K10

Pickup K20

Pickup K30 (Military)

Pickup K1500 – K3500

Pickup, S-Serie

Silverado

Suburban K20

Chrysler Jeep

Cherokee XJ

Cherokee KJ

Commander XK/XH

Grand Cherokee ZJ/ZG

Grand Cherokee WJ/WG

Grand Cherokee WK/WH

Wrangler YJ

Wrangler TJ

Wrangler JK

Daihatsu

Feroza, F300

Rocky

Taft, Wildcat

Dodge

Pickup W100-W250

Durango

Ram 1500

Ram 2500

Ram 3500

Ford

Bronco I

Bronco II

Explorer

Maverick

Ranger

Hyundai

Galopper II

Terracan

Isuzu

Amigo

Campo

D-Max

Rodeo

Trooper UBS 13-16-52

Trooper UBS 17-55

Trooper

Iveco

Massif

Kia

Sorento

Lada

Niva

4x4 M, 2121-4 (Niva)

Land Rover

Defender Serie I + II + III

Defender 90, 110, 130

Discovery I

Discovery II

Range Rover Classic

Mazda

Pickup

Mercedes

G

Mitsubishi

Galopper

Pajero L040

Pajero Sport, K90

Pajero V6 (L040)

Pajero V20 – V40

Pajero V60

Pickup L200

Nissan

Navara D40

Pickup MD21

Pickup MD22

Patrol GR Y60

Patrol GR Y61

Patrol K160

Patrol K260

Pickup Y720

Terrano I

Terrano II

Opel

Campo 2WD

Campo 4WD

Frontera A

Frontera B

Monterey

Santana

PS-10

Ssangyong

Korando

Musso

Suzuki

LJ80

Samurai/SJ 410/SJ413

Jimny

Grand Vitara

New Grand Vitara

Vitara

Toyota

4 Runner

Hilux

Landcruiser BJ-FJ 40

Landcruiser BJ-FJ 45

Landcruiser BJ 42

Landcruiser BJ-FJ 70-73

Landcruiser BJ-FJ-HJ 75

Landcruiser KJ-LJ-RJ 70-73

Landcruiser LJ-RJ 70-73

Landcruiser HJ 60-61

Landcruiser HZJ-PZJ 70-73-75

Landcruiser J7 78-79

Landcruiser J8 / J105

Landcruiser J9

Landcruiser J10

Landcruiser J12

RAV 4 SX, XA

RAV 4 AG, ZG

VW













Amarok












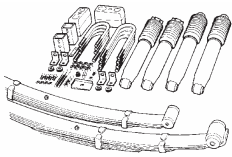



Iltis












LT





T3




Taro







	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
1976 – 1981	0-30			58380	58410		58900	58600
	40-70			58900	58600			58450
	80-100			58790	59390			58450
1982 – 1986	0-30			58900	58600		58900	58600
	40-70			58790	59390			58450
	80-100				58450			58450
1953 – 1975	0-30			58900	58600		58900	58600
1941 – 1963	0-30			58380	58410		58380	58410

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
1976 – 1986	+65	o.k.	S01239			2	58600		2	58450
						2	77012		2	77112
									1	17779
1976 – 1986	+100	o.k.	SCB01429			1	52080		1	52080
						2	77015		2	77115
						1	PA30		1	17804

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre							
								
								
1976 – 1986	tm / OE	13822	13823					

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
	1976 – 1986		15802	15841	

	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
	1976-1986	77012	+65	77112	+65
1976-1986	77015	+100	77115	+100	






	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
	1976 – 1986	66101		66100	66200	PA30








AMC Jeep











CJ5/CJ7 1963 - 1986










trail master
by **Maas**

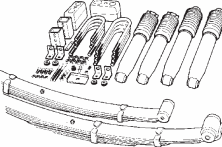






10.2013







	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
	gearbox lowering		16738		





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport	comfort	sport	
		0-30		59520		58380	58410	
		30-60		59440	57210		58900	58600







	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			58460		57530	
		50-80		58950	57070		57790	59890
		90-120		58470	58100			58720
		200			58760			58720






	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato											
		mm	TÜV									
	1976-1991	+100	---	S07429		2	58470		2	58720		1
					 <td>2</td> <td>77023</td> <td></td> <td></td> <td></td> <td></td> <td></td>	2	77023					

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
	1977-1991 (+200)					13645

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					
	1973-1976	15795	15869		
	1976-1991	15649	15869		OE/+100
			15796		+100

	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
	1973-1991	77023	+100		
	1977-1991 (3/4t)			77149	+100
	1977-1991 (3/4t)			77147	+200

	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
					
	w / OE	66032		66110	66220
	w/o OE			66208	SA40







	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
	gearbox lowering		16820		


Chevrolet / GMC

Blazer, Jimmy S-Serie 1982 - 2004

trail master
by **Maas**

10.2013

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
	2WD	0-20			57410		57910	59270
	4WD	0-30			58400		57910	59270
4WD	90-120			57830		57920	59900	

	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
	1983-1994	66107				











Chevrolet / GMC









Blazer, Yukon, Tahoe, Suburban











1992 - 1998

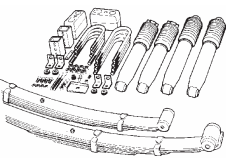




trail master
by **Maas**




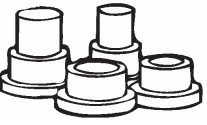


10.2013





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
			comfort	sport	comfort	sport		
		0-30		58460		57910	59270	
		50-80		58950	57070		57920	59900
		90-120		58470	58100			57080
		130-180			58760			57080

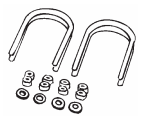




	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			58460		57530	
		50-80		58950	57070		57790	59890
		90-120		58470	58100			58720






	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Aseto Rialzo									
		mm	TÜV							
	1976-1987	+100	---	S07429		2	58470		2	58720
					 <td>2</td> <td>77023</td> <td> <td>2</td> <td>17838</td> </td>	2	77023	 <td>2</td> <td>17838</td>	2	17838









	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre						
							
	1976-1991 (+200)						13645










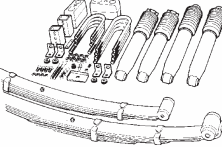

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
	1973-1976	15795	15869		
1976-1991	15649	15869		OE/+100	
		15796		+100	





	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
	1973-1991	77023	+100		





	Lenkungsämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
					
	w / OE	66032			66220
w/o OE			66110	66208	SA40








	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
	gearbox lowering		16820		






	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			58460		57530	
		50-80		58950	57070		57790	59890
		90-120		58470	58100			58720

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevación de suspensión • Aseto Rialzato									
		mm	TÜV							
		+100	---	S07459		2	58740		2	58720
					 <td>2</td> <td>77023</td> <td> <td>2</td> <td>77149</td> </td>	2	77023	 <td>2</td> <td>77149</td>	2	77149
								 <td>1</td> <td>17871</td>	1	17871

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti					
						mm
			15649		15869	+100

	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
		77023	+100	77149	+100
				77147	+200

	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
	w/ OE	66032			66220	SA40
	w/o OE			66110	66208	SA40









	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
	gearbox lowering		16820		---





Chevrolet / GMC





Pickup K30, Military (3/4 ton) 1973 - 1987







trail master
by **Maas**



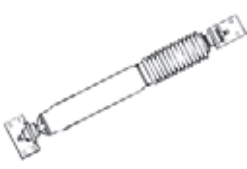


10.2013

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40			58460		57600	59260
		50-80		58950	57070			57800
		90-100		58470	58100			57800

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti			
				mm
		15813	15794	+100

	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
		77023	+100		

	Lenkungsämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
w / OE	66032			66220		
w/o OE			66110	66208		











	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
gearbox lowering			16820		

Chevrolet / GMC

Pickup K1500 – K3500 1988 - 2006

trail master
by **Maas**

10.2013

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori						
		mm					
				comfort	sport		comfort
1988-1998	0-20			58460		57920	59900
	50-80			58460			57080
	90-120		58470	58100			57080
1999-2006	0-20					57600	59260
	90-120						57800

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
	2WD	0-20			57410		57910	59270
	4WD	0-30			58400		57910	59270
	4WD	90-120			57830		57920	59900





	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
	1983-1994	66107				









Chevrolet / GMC











Silverado 1999 – 2006 (not HD)

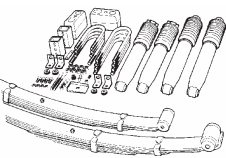



trail master
by **Maas**





10.2013



	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
			comfort	sport	comfort	sport		
		0-20					57600	59260
	90-120						57800	



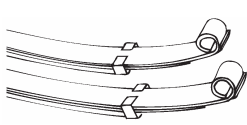


	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			58460		57530	
		50-80		58950	57070		57790	59890
		90-120		58470	58100			58720











	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevación de suspensión • Asseto Rialzato							
		mm	TÜV					
				S07459				
	¾ t	+100	---		 2	58740	 2	58720
					 2	77023	 2	77149
							 1	17871












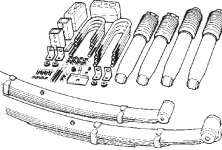













	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
			15649	15869	+100






	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
		77023	+100	77149	+100
				77147	+200





	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
	w/ OE	66032			66220	SA40
	w/o OE			66110	66208	SA40





	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
	garbox dropkit		16820		---





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori						
		mm					
				comfort	sport	comfort	sport
		0-30		59980	59700	57480	
		40-60		58750	58880		57480
		70-90			57880		57520
		100-150			57810		57870





	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevation de suspension • Assesto Rialzato									
		mm	TÜV							
Axle-Ø 71 mm	+50		o.k.	S08279		2	58750		2	57480
						1	76041		2	77155
						1	13651		1	15839
									1	8001
Axle-Ø 71 mm	+50		o.k.	S08289		2	58880		2	57480
HD front spring						1	76003		2	77155
						1	13651		1	15839
									1	8001
Axle-Ø 71 mm	+75		o.k.	S08319		2	57880		2	57520
						1	76051		2	77143
									1	17866
Axle-Ø 71 mm	+115		o.k.	S08519		2	57810		2	57870
						1	76039		2	77137
						1	83402		1	17864



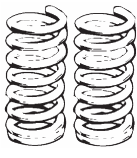


	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre						
							
tm / OE				13651			







	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti			
				mm
Axle-Ø 71 mm			15839	
Axle-Ø 76 mm			15842	







	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre			
			mm	
				mm
			77114	-45
			77126	OE
			77128	HD +50
			77155	+50
			77143	+75
			77137	+115









	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspensión • Molle				
			mm		mm
		76008	-40		
		76003	HD +50		
		76041	+50		
		76051	+75		
	76039	+115			

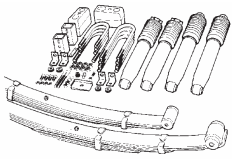



	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
					
		66107			





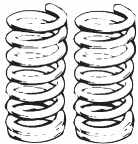

	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio					
					mm	
	panhard rod bracket	81203				+75
	anti sway bar link	81204				+75 / +115
	ultimate quick disconnect	81208				+75 / +115
	adj. panhard rod	83402				
	gearbox lowering			16867		
bump stop adapter				8210	+50	








	Längslenkerarme • control arms • tirants de pont • tirantes de suspensión • puntone				
			mm		mm
	upper		83403	+75/+115	
lower		83405	+75/+115		



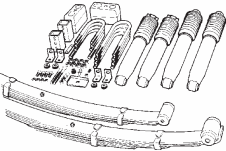






	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30		---	---		59950	
	40-70		---	---		58190		












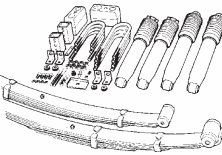










	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
		+50	o.k.	S53219		---		2	58190	
							1	76042		1











	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
			76042	+50	76142

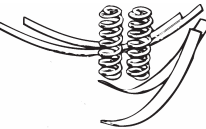



	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
			comfort	sport	comfort	sport		
		0-20	---	---		59530	54560	
		30-60	---	---			57140	
		90-150	---	---			58250	




	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Assesto Rialzato									
		mm	TÜV							
					1			2		
	+50	o.k.	S05219		1				2	57140



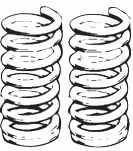


	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30		59980	59700		58430	58650
		40-60		59290	58880		57990	58350
		70-100			57880			57300
		110-130			58150			57090








	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
	sport	+50	o.k.	S08239		2	58880		2	58350
					 <td>1</td> <td>76003</td> <td> <td>1</td> <td>76120</td> </td>	1	76003	 <td>1</td> <td>76120</td>	1	76120
									1	17873
	comfort	+50	o.k.	S08299	 <td>2</td> <td>59290</td> <td> <td>2</td> <td>57990</td> </td>	2	59290	 <td>2</td> <td>57990</td>	2	57990
					 <td>1</td> <td>76003</td> <td> <td>1</td> <td>76120</td> </td>	1	76003	 <td>1</td> <td>76120</td>	1	76120
									1	17873
	sport	+75	---	S08359	 <td>2</td> <td>57880</td> <td> <td>2</td> <td>57300</td> </td>	2	57880	 <td>2</td> <td>57300</td>	2	57300
					 <td>1</td> <td>76072</td> <td> <td>1</td> <td>76172</td> </td>	1	76072	 <td>1</td> <td>76172</td>	1	76172
									1	17873









	Tieferlegungsfahrwerke • suspension lowering kits • ensemble de rebaisser suspension • rebajada suspensión • Abbassandosi									
		mm	TÜV							
		-40	o.k.	S08269		2	59700		2	58430
					 <td>1</td> <td>76008</td> <td> <td>1</td> <td>76121</td> </td>	1	76008	 <td>1</td> <td>76121</td>	1	76121












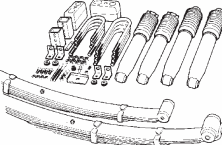

	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspensión • Molle						
				mm		mm	
				76003	+50	76120	+50
				76072	+75	76172	+75
				76079	+100	76179	+100





	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
		66107				








	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio					
					mm	
	anti sway bar link	81204				+75 / +115
	ultimate quick disconnect	81208				+75 / +115
	adj. Panhard rod	83402				
gearbox lowering			16867			

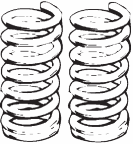







	Längslenkerarme • control arms • tirants de pont • tirantes de suspensión • puntone			
				
	+75-115mm		83403	83404
+75-100mm		83401		







	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			56740			59220
	40-70		56720	58880			57330	
	70-100		59290	57130		59100	58160	








	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
	gas	+50	o.k.	S08339		2	56720		2	57330
						1	76047		1	76147
Diesel	+50	o.k.	S08349		2	56720		2	57330	
					1	76059		1	76147	



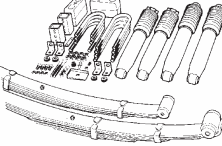




	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspensión • Molle					
				mm		mm
	gas		76047	+50	76147	+50
	Diesel		76059	+50	76147	+50










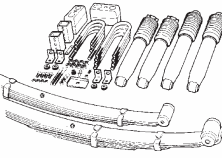


	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
		66131				




	Längslenkerarme • control arms • tirants de pont • tirantes de suspensión • puntone			
				
	upper		83403	---
			---	---
		---	---	
lower, adjustable		83414	---	




	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
			comfort	sport	comfort	sport		
		0-20	---	---		59530	54560	
		30-60	---	---			57140	
		90-150	---	---			58250	

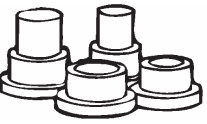


	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato								
		mm	TÜV						
		+50	o.k.	S05219	 1	 2			57140

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
				comfort	sport	comfort	sport	
		0-30		57180	57490		58780	
		40-60		59450			58440	
		70-130			59500		58520	



	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevación de suspensión • Asseto Rialzato									
	i	mm	TÜV							
	+50	o.k.	SCB04139		1	52030		1	52040	
						77107		1	77107	
								1	17789	
	+100	o.k.	SCB04429		1	52030		1	52050	
						77031		1	77131	
								1	17803	

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
	i					
					13825	13825

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
	i				
		15851		15852	

	Blattfedern • leaf springs • ressorts á lames • Ballestas • Balestre				
	i				
			mm		mm
		77107	+50	77107	+50
		77031	+100	77131	+100

	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
	i				
		66107		66209	PA40

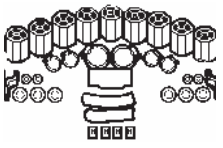




	Body-Lift-Kit • Body lift kit • Ensemble de rehausse de caisse • Kit Body Lift para levantar la carrocería • Kit body lift			
	i	TÜV		
				mm
		---	99291	+50
		---	99391	+75
	adaptor f. automatic		99921	+50
	adaptor f. automatic		99901	+75










Chrysler Jeep













Wrangler YJ 1986 - 1995












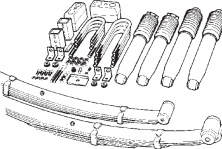
















trail master
by **Maas**





10.2013


	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
	gearbox lowering				
	anti sway bar link	8167			+75/+100
	quick disconnect	81202			+75/+100
bump stop adapter	8208				




	leaf kit • leaf kit • kit lames additionnelles • kit de hoja adicional de ballestas • kit foglio balestre							
		 kg						
				#				#
					31530			

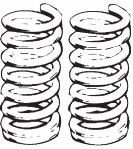




	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori						
		mm					
				comfort	sport	comfort	sport
		0-40		59980	59700		57500
		50-70		58750	58880		58490
		80-100		59290			58820
		110-150		57810	57880		58820
		160-190		57730	59320		58200

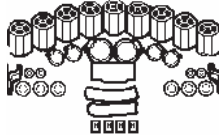







	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevación de suspensión • Asseto Rialzato									
		mm	TÜV							
1996-	+50	o.k.	S04219		2	58750		2	58490	
								1	17800	
1996-	+50	o.k.	SCB04229		2	52060		2	52070	
								1	76076	
1996-2002	+75	o.k.	S04319		2	58750		2	58490	
								1	76077	
2003-2006	+75	o.k.	S04329		2	58750		2	58490	
								1	76077	
1996-2002 4 cyl.	+100	o.k.	S04459		2	59290		2	58820	
								1	76037s	
1996-2002 6 cyl.	+100	o.k.	S04449		2	59290		2	58820	
								1	76037	
2003-2006 4 cyl.	+100	o.k.	S04479		2	59290		2	58820	
								1	76037s	
2003-2006 6 cyl.	+100	o.k.	S04469		2	59290		2	58820	
								1	76037	
								1	17785	

	Schraubenfedern • coil springs • ressorts hélicoïdal • Muelles de suspensión • Molle				
			mm		mm
		76076	+50	76176	+50
		76077	+75	76177	+75
	4 cyl.	76037s	+100	76137	+100
	6 cyl.	76037	+100	76137	+100
		76073	+165	76173	+165

	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
					
					
		66107		66208	PA40




















	Body-Lift-Kit • Body lift kit • Ensemble de rehausse de caisse • Kit Body Lift para levantar la carrocería • Kit body lift			
		TÜV		mm
		---	99292	+50
		99392	+75	




	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
			17800		
1996-2002		17801			+100
2003-06		17785			+100
		17850			+165
caster kit	80101				
anti sway bar link	81205				+50/+75
quick disconnect	81201				+75/+100
ultim. quick disconnect	81208				0-50
ultim. quick disconnect	81209				+75/+100
shock stem eliminator				81206	
adjustable panhard rod	83402				









	Längslenkerarme • control arms • tirants de pont • tirantes de suspensión • puntone					
				mm		mm
	upper		83403	+75/+100	83404	+75/+100
lower		83401	+75/+100	83401	+75/+100	
		---		---		
		---		---		



Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori						
	mm					
			comfort	sport	comfort	sport
	0-30		56760		59190	
	40-60		56660	59180		56770 56780
	40-60		52100			52110
	70-90		59250	59350		56790 56780
	100-120		56630	59350		56790 54260





Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
	mm	TÜV							
spacer kit	+50	o.k.	S05229		2	56660		2	59190
							1	17783	
short, Gas, all	+50	o.k.	SCB05259-1		2	52100		2	52110
					1	76097		1	76196
							1	17877	
short, Diesel, all	+50	o.k.	SCB05259-2		2	52100		2	52110
					1	76096		1	76196
							1	17877	
long, Gas, all	+50	o.k.	SCB05259-3		2	52100		2	52110
					1	76096		1	76194
							1	17877	
long, Diesel, all	+50	o.k.	SCB05259-4		2	52100		2	52110
					1	76094		1	76194
							1	17877	
short, Gas, not Rubicon	+75	o.k.	S05359-07		2	59250		2	56790
					1	76094		1	76199
							1	83412	1
short, Gas, Rubicon	+75	o.k.	S05359-08		2	59250		2	56790
					1	76094		1	76199
							1	83412	1
short, Diesel, not Rubicon	+75	o.k.	S05359-05		2	59250		2	56790
					1	76099		1	76199
							1	83412	1
short, Diesel, Rubicon	+75	o.k.	S05359-06		2	59250		2	56790
					1	76099		1	76199
							1	83412	1
long, Gas, not Rubicon	+75	o.k.	S05359-03		2	59250		2	56790
					1	76064		1	76164
							1	83412	1
long, Gas, Rubicon	+75	o.k.	S05359-04		2	59250		2	56790
					1	76064		1	76164
							1	83412	1
long, Diesel, not Rubicon	+75	o.k.	S05359-01		2	59250		2	56790
					1	76095		1	76164
							1	83412	1
long, Diesel, Rubicon	+75	o.k.	S05359-02		2	59250		2	56790
					1	76095		1	76164
							1	83412	1










Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
	mm	TÜV							
			short, not Rubicon	+100	o.k.	S05429		2	59250
					1	76064		1	76164
								1	17869
short, Rubicon only	+100	o.k.	S05449		2	59250		2	56790
					1	76064		1	76164
								1	17808
long, not Rubicon	+100	o.k.	S05439		2	59250		2	56790
					1	76065		1	76165
								1	17869
long, Rubicon only	+100	o.k.	S05459		2	59250		2	56790
					1	76065		1	76165
								1	17808







Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspensión • Molle				
		mm		mm
long, Diesel combat, black	76094	+50	76194	+50
long, Gas, combat, black	76096	+50	76194	+50
short, Diesel, combat, black	76096	+50	76196	+50
short, Gas, combat, black	76097	+50	76196	+50
long, Diesel	76095	+75	76164	+75
long, Gas	76099	+75	76164	+75
short, Diesel	76099	+75	76199	+75
short, Gas	76094	+75	79199	+75









Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
					
					PA50
	66124		66125		PA50
HD damper			66126		PA50

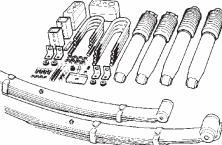








Body-Lift-Kit • Body lift kit • Ensemble de rehausse de caisse • Kit Body Lift para levantar la carrocería • Kit body lift			
	TÜV		mm
	---	99295	+50



Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
				mm
caster kit	80103			
panhard rod bracket	81210			+75
solid sway bar links	81211			+75/+115
adjustable panhard rod	83412			
panhard rod mounting kit	80104			
ultim. quick disconnect	81207			+50/+115
trackbar relocation bracket			81212	
pitman arm	PA50			+75/+100








	Längslenkerarme • control arms • tirants de pont • tirantes de suspensión • puntone			
				
upper			---	---
lower			83410	83411
upper, adjustable			83406	83407
lower, adjustable			83408	83409









	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20		59650	56800			59210
		30-50		59650	56800			57210

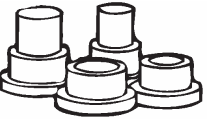


	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato										
		mm	TÜV								
				S14219		2	59650		2	57210	
		+35/50	o.k.					 <td>1</td> <td>31510</td> <td></td>	1	31510	

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre						
							
							
			13647				





	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti			
				mm
			15769	










	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
			comfort	sport	comfort	sport		
		0-20		59520	57210		59520	57210
		30-50		59440	59460		59440	59460
		60-100		59580	58290		59580	58290





	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
	i					
						
		13641	13647			










	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
	i				
		15854		15769	
				mm	







	Lenkungs­dämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
	i					
						
		66042				










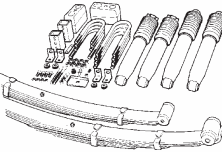

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport	comfort	sport	
		0-30		59650	56800		59730	





	Lenkungs­dämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
		66042				





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30		58380	58410		58380	58410










	Lenkungs­dämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
		66042				




	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30		57610				57770
		80-120		57620				57770











	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
W200 Military	+100	---	S26439		2	57620		2	57770	
					2	77024		1	31549	
					1	16797		1	15794	
								1	16815	

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					
					mm
					15794







	Blattfedern • leaf springs • ressorts á lames • Ballestas • Balestre				
				mm	
					mm
		77024	+100		










	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
				66110	66220	16796







	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
			comfort	sport	comfort	sport		
4WD	0-30		58140			57060		
2WD	0-30		57410			57060		

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
1994 – 2001 2WD		0-30			58800			58830
2002 – 2005 2WD		0-30			56650		57600	59260
		70-100						57800
1994 – 2001 4WD		0-30		57460	59280		57600	59260
		70-100			59680			57800
2002 – 2005 4WD		0-30					57600	59260
		70-100		57710				57800
2006 – 2007 4WD		0-30		---	---		57600	59260
		70-100		---	---			57800





	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
1994-2001		66103		66110	66208	










	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
not Powerwagon		0-20		57460	59280			59260
not Powerwagon		70-100			59680			57800

	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
1994-2001	66103			66110	66208	
2002					66208	

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport	comfort	sport	
1994 – 2007		0-30		57460	59280		59260	
1994 – 2007		70-100			59680		57800	

	Lenkungs­dämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
					
					
2001-2002				66208	

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
	Bronco II 1980-1996	0-30			58280			57650




	Lenkungs­dämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
	Bronco 4WD 1966-1969	66032		66110		
Bronco 1970-1979	66022					

Ford

Explorer 4WD

trail master
by **Maas**

10.2013

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori						
	i	mm					
				comfort	sport	comfort	sport
1995-	0-30			---			57930
1991-1994	0-20			57890	<u>of</u>		57580
	100	<u>of</u>		59460	<u>of</u>		57370

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30		57700	56710			58870
		40-60		57700	56710		58510	
		100			59710		58890	59860





	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevación de suspensión • Asseto Rialzato									
		mm	TÜV							
	short	+25/50	o.k.	S47219	2	57700	2	58510	1	76146
	long	+25/50	o.k.	S47229	2	57700	2	58510	1	76102
	short	+50/80	o.k.	S47329	2	57700	2	58890	1	76102
	long	+50/80	o.k.	S47319	2	57700	2	58890	1	76160
					1	17875	1	76102	1	76160







	Tieferlegungsfahrwerke • suspension lowering kits • ensemble de rebaissier suspension • rebajada suspensioe • Abbassandosi										
		mm		TÜV							
	1993-	-25/50	E	o.k.	S11229	2	57560	2	58790	1	76105
	1993-	-50/80	E	o.k.	S47419	2	57560	2	58600	1	76128
										1	8202












	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
	short			76146	+50
short			76102	+80	
long			76102	+50	
long			76160	+80	
			76105	-50	
			76128	-80	

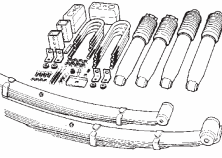



	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
	1993-2007			66127		





	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
	adapter kit front axle	16734			
bump stop adapter rear			8218		

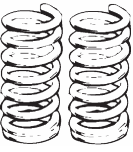



	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori						
		mm					
			comfort	sport	comfort	sport	
1983 - 1997	0-30		58280		58110		
1999 - 2006	0-30		58280			56890	
2007 -	0-30		58280			56890	
	40-70					56900	







	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			57410			58590
		40-60			58500		57170	57160









	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
	short	+30/60	o.k.	S15259		2	57410		2	57160
						1	16746		1	76106k
	long	+30/60	o.k.	S15229		2	57410		2	57160
						1	16746		1	76106




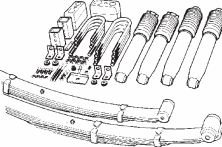


	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
	short			76106k	+60
long			76106	+60	



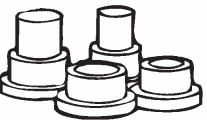

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
			comfort	sport	comfort	sport		
		0-20		57560		58120	57000	
		30-60		57560		59760	59800	





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30		59650	56800		58790	59390







	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
4WD 1988 -		0-20		59650	56800		58790	58870
		30-50		57700	56710			58450
2WD 1990 -					57420			58870





	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevación de suspensión • Asseto Rialzato									
		mm	TÜV							
				S41249		2	57700		2	58450
4WD	+25/50	o.k.			1	16735		2	77106	







	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
			13653			









	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
				15817	



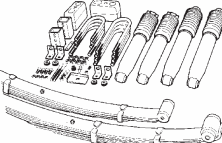


	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
				mm	
					mm
				77106	+50




	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20		57700	56710		58790	
	25-50		57700	56710		58450		





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport	comfort	sport	
		0-30		59650	56800	58790	59390	







	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			59650	56800		56880
	40-60			57700	5710		58450	









	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
		+50	o.k.	S27219		2	57700		2	58450
					1	16735		2	77106	




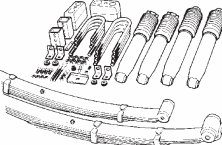





	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre							
								
				13653				



	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					
				15817	





	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
				77106	+50







	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30		59650	56800			59490
		40-60		57700	56710		58710	








	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
		+50	o.k.	S27229		2	57700		2	58710
						1	16735		2	77106

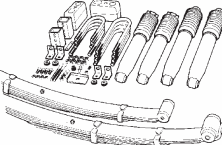



	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
						
			13653			






	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
				mm	
				15817	

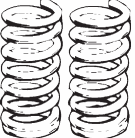










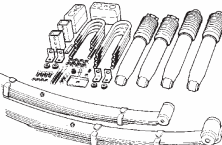

	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
				77106	





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20		57700	56710		59970	57360
		25-50		57700	56710		59970	57360





	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
										
		+25/50	o.k.	S44219	2	57700	2	57360		
					1	16736	1	76122		





	Schraubenfedern • coil springs • ressorts hélicoïdal • Muelles de suspension • Molle				
			mm		mm
				76122	+50






	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20			58170			57010
		30-50			57030			56940



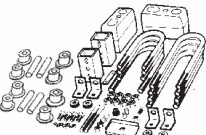

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
5-door only not 3-door not Santana		+50	o.k.	S31219		2	57030		2	56940
						2	77059		2	77159
								1	17729	
3-door		+50	o.k.	S31229		2	57030		2	56940
						2	77059		2	77164
								1	17876	





	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
	tm springs only				13660	13660





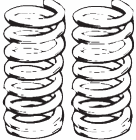

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti			
				mm
	tm springs only	15834	15834	+50












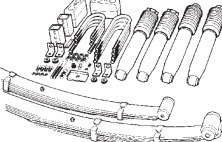

	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
5-door only not 3-door not Santana		77059	+50	77159	+50
3-door		77059	+50	77164	+50






	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
5-door			17729		
3-door			17876		
shackles		16830			





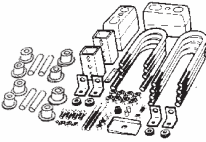



	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20		---	---		58910	57310












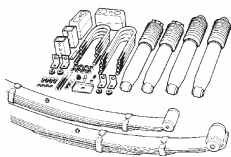




	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
		76049	OE	76149	OE





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20			57630			56690
	30-50		57860	58180		56810	56820	







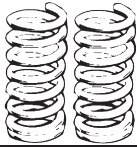







	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
	comfort	+50	o.k.	S33239		2	57860		2	56810
						1	76061		1	76161
					1	16862		1	16858	
sport	+50	o.k.	S33249		2	58180		2	56820	
					1	76061		1	76161	
					1	16862		1	16858	












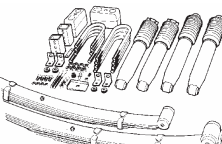





	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio					
						mm
	mounting kit		16858			
bump stop rear					16862	





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20			57630		58960	57320
		30-50		57860	58180		59430	59200
		60-70		57860	58180			

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevación de suspensión • Asseto Rialzato									
		mm	TÜV							
	comfort	+50	o.k.	S33219		2	57860		2	59430
					 <td>1</td> <td>76061</td> <td> <td>1</td> <td>76161</td> </td>	1	76061	 <td>1</td> <td>76161</td>	1	76161
									1	16858
	sport	+50	o.k.	S33229	 <td>2</td> <td>58180</td> <td> <td>2</td> <td>59200</td> </td>	2	58180	 <td>2</td> <td>59200</td>	2	59200
					 <td>1</td> <td>76061</td> <td> <td>1</td> <td>76161</td> </td>	1	76061	 <td>1</td> <td>76161</td>	1	76161
									1	16858

	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
			76061	+50	76161

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
Defender 90		0-20		54320	54380		54330	54390
		30-50		54349	54400		54350	54410
		60-100			54360			54370
Defender 110		0-20		54320	54380		54330	54390
		30-50		54340	54400		54350	54410
		60-100			54360			54370
Defender 130		0-20		54320	54380		54330	54390
		30-50		54340	54400		54350	54410

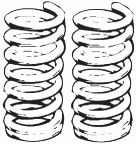	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
Defender 90	+50		o.k.	S30219		2	54400		2	54410
						1	76014		1	76114
Defender 110	+40		o.k.	S30229		2	54400		2	54410
						1	76014		1	76156
Defender 130	+30		o.k.	S30229		2	54400		2	54410
						1	76014		1	76156



















	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspensión • Molle				
			mm		mm
Defender coilspring plates				16751	+05/+10
Defender 90		76013	HD +20	76113	HD +20
Defender 90		76014	+50	76114	+50
		76075	HD +50	76158	HD +50
Defender 90		76062	+100	76162	+100
Defender 110		76013	HD +10		
Defender 110		76014	+40	76156	+40
Defender 110		76075	HD +40	76157	HD +40
Defender 130		76013	HD		
Defender 130		76014	+30	76156	+30
Defender 130		76075	HD +30	76157	HD +30

Land Rover

Defender (90, 110, 130) 1984 -









trail master
by **Maas**








10.2013




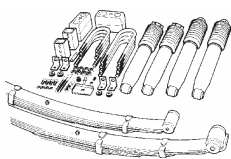
 special applications	Stoßdämpfer Umbausatz m. U-Halter • shock stem eliminator kit w/ U-bracket • kit d'élimination de barette d'amortisseur avec étriers • kit para convertir el anclaje de amortiguador de tipo con pasador									
		mm								
				comfort	sport			comfort	sport	
Defender 90	40-70		16753		54420		16752		54430	
	80-100		16753		54440		16752		54450	
Defender 110	40-70		16753		54420		16752		54430	
	80-100		16753		54440		16752		54450	
Defender 130	40-70		16753		54420		16752		54430	
	80-100		16753		54440		16752		54450	




	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
		66120				



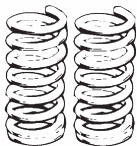




	Lenkungs­dämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
Serie I + II + III 80" – 109"	66033					
Serie II + III 88"	66033					

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20		54320	54380		54330	54390
		30-50		54340	54400		54350	54410
		60-100			54360			54370

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Assesto Rialzato									
		mm	TÜV							
										
		HD +20	o.k.	S30119	2	54380	2	54390		
					1	76013	1	76113		
		+50	o.k.	S30219	2	54400	2	54410		
					1	76014	1	76114		









	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
			76013	HD +20	76113
		76014	+50	76114	+50
		76075	HD +50	76158	HD +50








	Lenkungs­dämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
					
					
		66033			




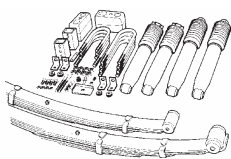
	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
			comfort	sport			comfort	sport
TD5 only		0-30						59620
not TD5		0-20		54320	54380		54330	54390
not TD5		30-50		54340	54400		54350	54410
not TD5		60-100			54360			54370









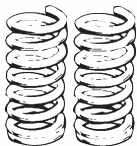Land Rover






Range Rover 100 Classic 1970 - 1994













	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20		54320	54380		54330	54390
		30-50		54340	54400		54350	54410
		60-100			54360			54370












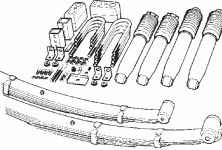

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevación de suspensión • Aseto Rialzato									
		mm	TÜV							
										
		HD +20	o.k.	S30119	2	54380	2	54390		
					1	76013	1	76113		
		+50	o.k.	S30219	2	54400	2	54410		
					1	76014	1	76114		





	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
			76013	HD +20	76113
		76014	+50	76114	+50
		76075	HD +50	76158	HD +50





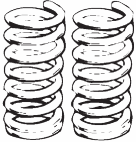

	Lenkungs­dämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
					
					
		66033			










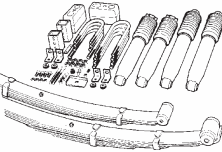

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
			comfort	sport	comfort	sport		
B1600 – B2500 1987-1996		0-30		59480			59390	
B (UN/UF) 96-06		0-30		58280			56890	
BT-50 (07-)		0-30		58280			56890	
		40-70					56900	





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
W460		0-40			54460			54480
		50-60			54460			54490
W461 short (2400/2850 mm)		0-40			54470			54480
		50-60			54460			54490
W461 long (3120/3400 mm)		0-40			54460			54480
		50-60			54460			54490
W463		0-40			54470			54480
		50-60			54460			54490





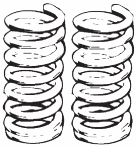

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
										
not 400 CDI not 500 V8	HD +40	---	---	S52210		1	76034		1	76134
	not 400 CDI not 500 V8	HD +40	ok	S52219		2	54460		2	54480
						1	76034		1	76134









	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspensión • Molle					
			mm		mm	
not 400 CDI not 500 V8		76034	+40	76134	+40	



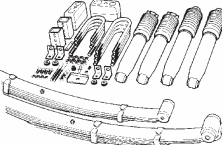



	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			57410			58590
	40-60			58500		57170	57160	





	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Assesto Rialzato									
		mm	TÜV							
	short, sport	+30/60	o.k.	S15259		2	57410		2	57160
						1	16746		1	76106k
long, sport	+30/60	o.k.	S15229		2	57410		2	57160	
					1	16746		1	76106	





	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
	short			76106k	+60
	long			76106	+60







	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40			58500			58450
		50-60			58500			58450











	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
		+30/70	o.k.	S10219		2	58500		2	58450
						1	16775		2	77103

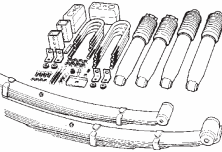



	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
			13655			







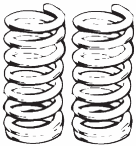

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
					15842










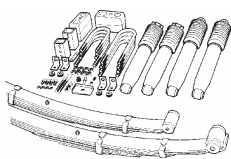

	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
				77103	+70





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			57410			58590
		40-60			58500		57170	57160





	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Assesto Rialzato									
		mm	TÜV							
	short (L040)	+30/60	o.k.	S15259		2	57410		2	57160
					1	16746		1	76106k	
					2	57410		2	57160	
					1	16746		1	76106	

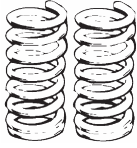


	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
	short (L040)			76106k	+60
long (L140)			76106	+60	







	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			57420			58090
	40-60			59650			58090	
	70-100						57230	









	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Aseto Rialzato									
		mm	TÜV							
	V20 short	+30/60	o.k.	S15249		2	57420		2	58090
	V40 long	+30/60	o.k.	S15239		2	57420		2	58090
					1	16746		1	76106k	
					1	16746		1	76106	



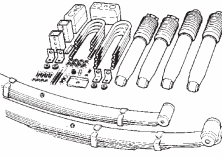



	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
	V20 short			76106k	+60
	V40 long			76106	+60


	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
	0-30		---	---			59930	





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
				comfort	sport	comfort	sport	
		0-20			57420		58600	
	30-60	of	57700	56710	of	59390	58920	






	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20			57410			58450
		30-60			58500			58510







	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
		+30/50	o.k.	S57219		2	58500		2	58510
						1	17865		2	77150









	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre								
									
		tm springs only		13654					




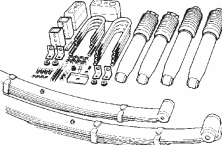





	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti			
				mm
			15793	




	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
				77150	+50





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
				comfort	sport	comfort	sport	
		0-20			58500		59390	58920
	30-60			58500			58870	









	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20			57420		58890	59860
		30-60		57700	56710		58890	59860












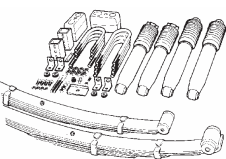

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
		+30/50	o.k.	S57229		2	57700		2	58890
						1	17865		2	77150





	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
						
	tm springs only		13654			





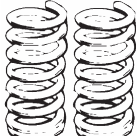


	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
				mm	
				15793	





	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
	1996-2001			77150	+50





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20		50110		58600		
		30-50		50110			59390	58920
		60-70		50111			56880	58870






	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato											
		mm	TÜV									
				S57239	2	50110		2	54220		2	77162
		50/60	o.k.		1	76090				1	17692	
		50/60	o.k.	S57249	2	50110		2	54220		1	17697
		65/75	o.k.	S57319	2	50111		2	54220		2	77173
					1	76090				1	17694	





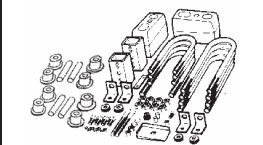



	Schraubenfedern • coil springs • ressorts hélicoïdal • Muelles de suspension • Molle					
			mm		mm	
		76090	+50			









	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
	tm springs only		13654			




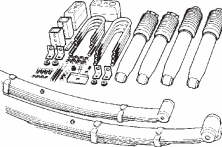


	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
				mm	
			15873		
			15871		+50 (incl. Blocks)



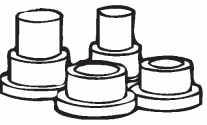

	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
	300 kg permanent load/axle			77170	OE
	600 kg permanent load/axle			77171	OE/HD
				77172	OE/HD
				77162	+60
	300 kg permanent load/axle			77163	+60/HD
				77173	+75





	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
	bump stop adapter			8212	






	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40			57420		58900	58600
		50-80			57560		58450	58870
		100			59710		58510	59860





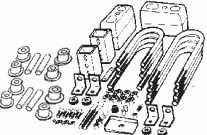


	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
				S09219		2	57420		2	58450
		+25/65	o.k			1	17812		2	77104







	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
			13656			




	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
				15805	
				15824	+75

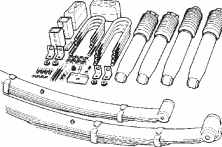


	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
				77104	+65

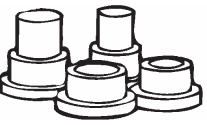


	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
	bump stop adapter			8207	




	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
			comfort	sport	comfort	sport		
		0-40		57420		58600	58920	
		50-80		57560		58450	58870	
		80-120				58510		





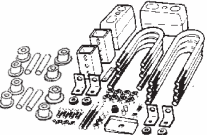

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Aseto Rialzato									
	i	mm	TÜV							
				part number	quantity	part number	quantity			
		+25/65	o.k	S09239		2	57420		2	58450
						1	17812		2	77104












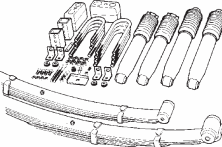


	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
	i					
		part number	part number	part number	part number	part number
			13656			





	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
	i				
		part number	part number	part number	part number
				15805	
				15824	+75







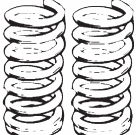


	Blattfedern • leaf springs • ressorts á lames • Ballestas • Balestre				
	i				
		part number	part number	part number	part number
				77104	+65





	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
	i				
		part number	part number	part number	part number
		bump stop adapter		8207	





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			50050		57550	58210
		40-60			50050		58420	59590











	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
										
with new leaf spring	+40/60	o.k.	S09259	50050	2	50050		2	56580	
				76092	1	76092		2	77166	
rear block kit	+40/50	o.k.	S09249	50050	2	50050		2	56580	
				76092	1	76092		1	17880	
With new HD spring, +300kg	+40/60	o.k.	S09269	50050	2	50050		2	56580	
				76092	1	76092		1	17879	
				76092	1	76092		2	77169	
								1	17690	






	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle					
			mm		mm	
	11.05-	76092	+40			





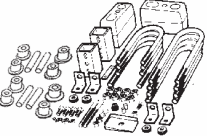



	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
						
			13636			












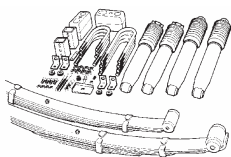

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
				mm	
only for 77169 for block kit incl. block kit				15876	
				15832	
				15877	+50
				15870	+50





	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
load system				77154	OE/HD
300 kg permanent load/axle				77156	OE/HD
600 kg permanent load/axle				77161	OE/HD
				77166	+60
300 kg permanent load/axle				77169	+60






	leaf kit • leaf kit • kit lames additionnelles • kit de hoja adicional de ballestas • kit foglio balestre								
		 kg							
				#			#		
load system	+600						77154		31579
+60mm	+300						77166		31504

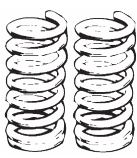







	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
bump stop adapter			8212		












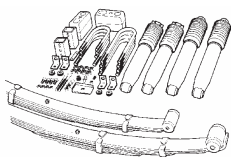


	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40		58580	56850		54520	54570
		50-60		54530	54380		54520	54570
		70-100		54540	54400		54550	





	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Aseto Rialzato									
		mm	TÜV							
long	+60	o.k.	S16219		2	54530		2	54520	
					1	76004		1	76104	
								1	16757	
short	+60	o.k.	S16229		2	54530		2	54520	
					1	76004		1	76104	
					1	16757		1	16826	







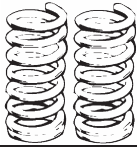


	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle					
				mm		mm
		76004		+60	76104	+60
200 kg		76029		HD +60		





	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
	87 – 8/89	66106				
	9/1989-6/1997	66033				












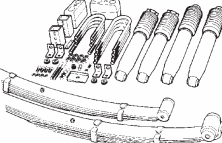




	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40		58580	56850		54520	54570
		50-60		54530	54380		54520	54570
		70-100		54540	54400		54550	







	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Aseto Rialzato									
		mm	TÜV							
										
Long, sport	+60	o.k.	S16239		2	54530		2	54520	
					1	76036		1	76136	
								1	16826	
Short, sport	+60	o.k.	S16249		2	54530		2	54520	
					1	76036		1	76136	
								1	16856	





	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
		76036	+60	76136	+60





	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
2,8 L	66033					
3,0 L	66102					










	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40			58560			59400
		50-80			58580		58570	59750








	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
	1980-1983	+60	o.k.	S13229		2	58580		2	58570
					 <td>2</td> <td>77001</td> <td> <td>2</td> <td>77101</td> </td>	2	77001	 <td>2</td> <td>77101</td>	2	77101
									1	17778
					 <td>2</td> <td>58580</td> <td> <td>2</td> <td>58570</td> </td>	2	58580	 <td>2</td> <td>58570</td>	2	58570
					 <td>2</td> <td>77001</td> <td> <td>2</td> <td>77101</td> </td>	2	77001	 <td>2</td> <td>77101</td>	2	77101
									1	17773







	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
				13657		
						13818
						13819











	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
			15845	15846	

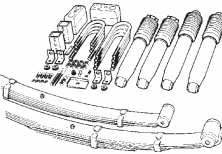




	Blattfedern • leaf springs • ressorts á lames • Ballestas • Balestre				
			mm		mm
		77001	+60	77101	+60
		77001	+60	77101.561	+60 HD





	leaf kit • leaf kit • kit lames additionnelles • kit de hoja adicional de ballestas • kit foglio balestre								
		kg							
					#			#	
		+140		77001		31562	77101	04/2008	31561





	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
		66115				









	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40			58580			58450
	50-80			59550			58890	



	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Assesto Rialzato									
		mm	TÜV							
	1980-1983	+60	o.k.	S13239		2	59550		2	58890
						 <td>2</td> <td>77021</td> <td> <td>2</td> <td>77101</td> </td>	2	77021	 <td>2</td> <td>77101</td>	2
									1	17773





	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre						
							
				13657			13818









	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
		15845			15846









	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
		77021	+60	77101 / 77101.561 (HD)	




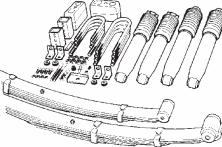




	leaf kit • leaf kit • kit lames additionnelles • kit de hoja adicional de ballestas • kit foglio balestre							
		kg						
				#	#	#	#	
		+140		77021	31560	77101	04/2008	31561

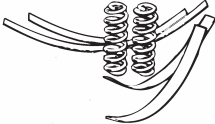



	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
	3,3 L	66115				







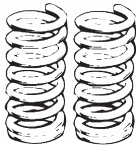

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			57420		58900	58600










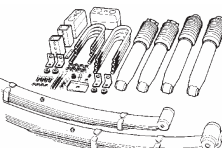



	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			57560		56880	58920
		40-60		57700	56710		58450	58870
		80-100			59710		58510	59860










	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
				S11219		2	57700		2	58450
		+25/50	o.k.			16750	 <td>1</td> <td>76102</td> <td></td>	1	76102	

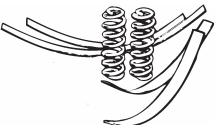



	Tieferlegungsfahrwerke • suspension lowering kits • ensemble de rebaisser suspension • rebajada suspensioe • Abbassandosi									
		mm		TÜV						
			E	o.k.	S11229		2	57560		2
		-25/50						 <td>1</td> <td>76105</td>	1	76105







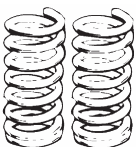

	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle					
				mm		mm
					76102	
				76160		+80
				76105		-50






	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30		57700	56710			58870
		40-60		57700	56710		58510	
		80-100			59710		58890	58860



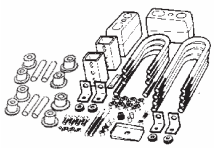

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato										
		mm	TÜV								
short	+25/50	o.k.	S47219		2	57700		2	58510		
								1	76146		
long	+25/50	o.k.	S47229		2	57700		2	58510		
								1	76102		
short	+50/80	o.k.	S47329		2	57700		2	58890		
								1	17875	1	76102
long	+50/80	o.k.	S47319		2	57700		2	58890		
								1	17875	1	76160







	Tieferlegungsfahrwerke • suspension lowering kits • ensemble de rebaissier suspension • rebajada suspensioe • Abbassandosi											
		mm		TÜV								
1993-	-25/50	E	o.k.	S11229		2	57560		2	58790		
									1	76105		
2/93-11/04	-50/80	E	o.k.	S47419		2	57560		2	58600		
									1	76128		
									1	8202		









	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle					
				mm		mm
short				76146		+50
short				76102		+80
long				76102		+50
long				76160		+80
				76105		-50
				76128		-80



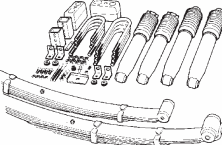

	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
		66127				




	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
adapter kit front axle	16734				
bump stop adapter rear				8218	





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20			57420			58450







	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20		59650	56800		58790	58870
		30-50		57700	56710			58450









	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato								
		mm	TÜV						
				S41249		2	57700		2
		+25/50	o.k.		1	16735		2	77106



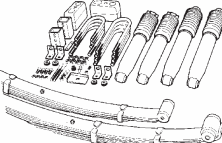

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
				13653		





	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
				mm	
				15817	





	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
				77106	+50







	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20		59650	56800		58790	59390
		25-60		57700	56710		58450	58870










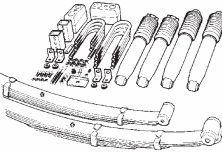

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato								
		mm	TÜV						
				S41219		2	57700		2
		+25/50	o.k.		1	16735		2	77106





	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
				13653		





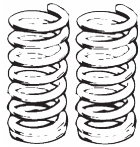

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
				mm	
				15817	










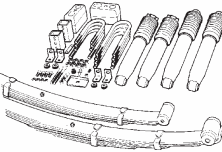


	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
				77106	+50





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori								
		mm							
				comfort	sport		comfort	sport	
		0-30		59650	56800			57220	
		30-60						57360	59910





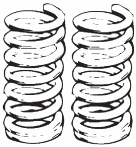

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
long	+25/50	o.k.	S41239		2	59650		2	57360	
								1	76148	
short	+25/50	o.k.	S41259		2	59650		2	57360	
								1	76185	









	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
	Long			76148	+50
Short			76185	+50	





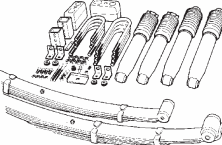






	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30		59650	56800			57710
		30-60					56870	57280

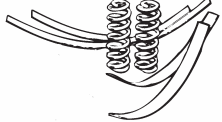



	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato										
		mm	TÜV								
	long	+25/50	E	o.k.	S41229		2	59650		2	57280
									 <td>1</td> <td>76148</td>	1	76148
	short	+25/50		o.k.	S41269	 <td>2</td> <td>59650</td> <td> <td>2</td> <td>57280</td> </td>	2	59650	 <td>2</td> <td>57280</td>	2	57280
									 <td>1</td> <td>76185</td>	1	76185





	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
	long			76148	+50
short			76185	+50	

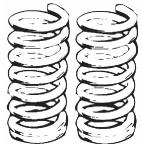


	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20		57700	56710		59970	57360
		25-50		57700	56710		59970	57360






	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
				S44219		2	57700		2	57360
		+25/50	o.k.			1	16736		1	76122














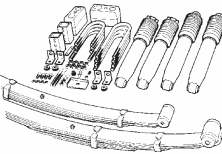





	Tieferlegungsfahrwerke • suspension lowering kits • ensemble de rebaisser suspension • rebajada suspensión • Abbassandosi										
		mm		TÜV							
					S44229		2	57700		2	57820
	long	-25/50	E	o.k.					1	76123	
	short	-25/50	E	o.k.	S44239		2	57700		2	57820
									1	76123k	










	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle					
				mm		mm
						76122
	long				76123	-50
	short				76123k	-50





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori								
		mm							
				comfort	sport		comfort	sport	
		0-40		58170			59670		






	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
				comfort	sport	comfort	sport	
		0-20		59650	56800			58370
	30-50	of	59650	56800	of		59580	

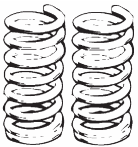


	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-35			50501			59660
		40-60			50504		58540	58130

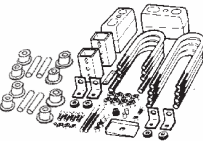	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato										
		mm	TÜV								
3-door	+35		o.k.	S17160		1	76078		1	76150	
3-door	+35		o.k.	S17169		2	50501		2	59660	
						1	76078		1	76150	
5-door	+35		o.k.	S17150		1	76050		1	76150	
5-door	+35		o.k.	S17159		2	50501		2	59660	
						1	76050		1	76150	









	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
						
	84-92	13830				












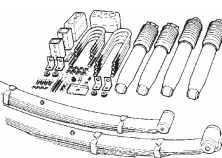





























	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
3-door		76078	+35	76150	+35
5-door		76050	+35	76150	+35








	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
		80102			





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
			comfort	sport	comfort	sport		
		0-30		59470			59470	
	40-70	of	59520	of		59520		





	Lenkungs­dämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
	i					
						
	66039					

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-35		59520	59470		58380	58410
		40-70		59520			58900	58600
		80-110		59440	58370		58790	59390




	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Assesto Rialzato									
		mm	TÜV							
sport, short (gas)	+50	o.k.	S02219		2	59520		2	58600	
					2	77018		2	77118	
								1	17863	
comfort, short (gas)	+50	o.k.	S02229		2	59520		2	58900	
					2	77018		2	77118	
								1	17863	
comfort, short (diesel)	+50	o.k.	S02249		2	59520		2	58900	
					2	77060		2	77118	
								1	17863	
comfort, long (gas)	+50	o.k.	S02239		2	59520		2	58900	
					2	77018		2	77160	
								1	17863	
comfort, long (diesel)	+50	o.k.	S02259		2	59520		2	58900	
					2	77060		2	77160	
								1	17863	
sport, except diesel	+70	o.k.	S02319		2	59520		2	58600	
					1	31505		1	31505	
								1	17863	
comfort, except diesel	+70	o.k.	S02329		2	59520		2	58900	
					1	31505		1	31505	
								1	17863	
sport, except diesel	+80	o.k.	S02379		2	58370		2	59390	
					2	77051		2	77151	
								1	17854	
comfort, except diesel	+80	o.k.	S02369		2	59440		2	58790	
					2	77051		2	77151	
								1	17854	

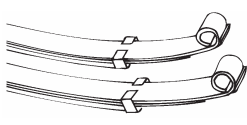



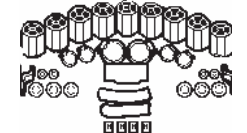

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
		13648	13648			



	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti			
				mm
		15768	15769	







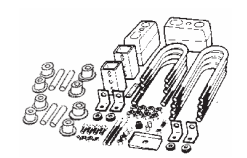

	Blattfedern • leaf springs • ressorts á lames • Ballestas • Balestre				
			mm		mm
gas, short		77020	OE	77120	OE
gas, long		77020	OE	77165	OE
diesel, short		77065	OE	77120	OE
diesel, long		77065	OE	77165	OE
gas, short		77018	+50	77118	+50
gas, long		77018	+50	77160	+50
diesel, short		77060	+50	77118	+50
diesel, long		77060	+50	77160	+50
gas, short		77051	+80	77151	+80












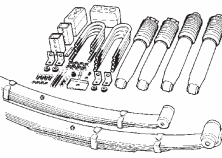

























	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
					
		66039		66100	66200
					PA20





	Body-Lift-Kit • Body lift kit • Ensemble de rehausse de caisse • Kit Body Lift para levantar la carrocería • Kit body lift			
		TÜV		mm
		o.k.	99380	+50






	leaf kit • leaf kit • kit lames additionnelles • kit de hoja adicional de ballestas • kit foglio balestre							
		kg		#			#	
long body		OE				77120		31533
short		+150				77120		31533
Diesel		OE	77020	06/2008	31553			
gas		+60	77020	06/2008	31553			

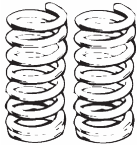




	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
transfer case drop			8095		
bump stop extensions		8209		8209	



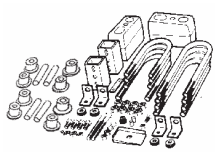


	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20		56730	57690		58620	57760
		30-50		56730	57690		59360	57350
		60-90		56680			57380	57780








	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
w/ ABS sport (gas)	+50		o.k.	S54219		2	57690		2	57350
						1	76043		1	76143
									1	81213
w/ ABS comfort (gas)	+50		o.k.	S54259		2	56730		2	59360
						1	76043		1	76143
									1	81213
w/o ABS sport (gas)	+50		o.k.	S54229		2	57690		2	57350
						1	76043		1	76143
									1	16857
w/o ABS comfort (gas)	+50		o.k.	S54279		2	56730		2	59360
						1	76043		1	76143
									1	16857
w/ ABS sport (diesel)	+50		o.k.	S54239		2	57690		2	57350
						1	76053		1	76143
									1	81213
w/ABS comfort (diesel)	+50		o.k.	S54269		2	56730		2	59360
						1	76053		1	76143
									1	81213
w/o ABS sport (diesel)	+50		o.k.	S54249		2	57690		2	57350
						1	76053		1	76143
									1	16857
w/o ABS comfort (diesel)	+50		o.k.	S54289		2	56730		2	59360
						1	76053		1	76143
									1	16857

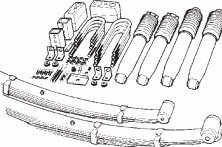



	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
	gas		76043	+50	76143
diesel		76053	+50	76143	+50
		76086	+75	76186	+75






	Lenkungsämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
					
	not Type 6, 86 HP TD only Type 6, 86 HP TD			66802	
			66809		

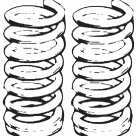	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
	control arm bushings	13829		13829	
	control arm bushings, adjustable	13632			
	adaptor f. brake power regulator			16857	
brake hose steel flex		81213			

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30						
		40-70						

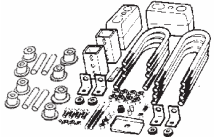	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato							
		mm	TÜV					
		+50	o.k.					
								

	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle					
				mm		mm
					76154	+50



	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio					
						mm
	adapter kit front axle		16774			+50




Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
i	mm	SUV			Van		
		comfort	sport	comfort	sport		
	0-35		50501		58540	59660	
only with differential lowering kit	40-60		50504		58540	58130	






Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato										
i	mm	TÜV	SUV	SUV			Van			
				coil	shock	part no.	coil	shock	part no.	
long	+35	o.k.	S17130**		1	76044		1	76150	
long	+35	o.k.	S17139		2	50501		2	59660	
					1	76044		1	76150	
long	+50	o.k.	S17239		2	50504		2	58130	
					1	76074		1	76187	
								1	17872	
Diesel + V6	+35	o.k.	S17140**		1	76074		1	76144	
Diesel + V6	+35	o.k.	S17149		2	50501		2	59660	
					1	76074		1	76144	
Diesel + V6	+50	o.k.	S17229		2	50504		2	58130	
					1	76050		1	76150	
								1	17874	
50mm suspension + 50mm bodylift	+100	o.k.	S17429		2	50504		2	58130	
					1	76050		1	76150	
					1	99250		1	17874	
long Diesel + V6	+35	o.k.	S17160**		1	76078		1	76150	
long Diesel + V6	+35	o.k.	S17169		2	50501		2	59660	
					1	76078		1	76150	
long Diesel + V6	+50	o.k.	S17249		2	50504		2	58130	
					1	76050		1	76187	
								1	17874	
Vitara	+35	o.k.	S17120**		1	76044		1	76144	
Vitara	+35	o.k.	S17129		2	50501		2	59660	
					1	76044		1	76144	
Vitara	+50	o.k.	S17219		2	50504		2	58130	
					1	76074		1	76150	
								1	17872	
50mm suspension + 50mm bodylift	+100	o.k.	S17419		2	50504		2	58130	
					1	76074		1	76150	
					1	99250		1	17872	

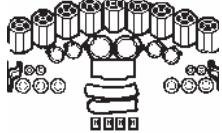

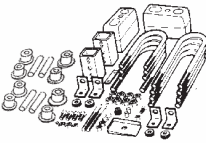


Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspensión • Molle					
i	SUV	mm	Van		
			mm	mm	
Vitara long (Diesel+V6)	76074	+35	76150	+35	
	76050	+50	76187	+50	
Vitara long (gas, 4 cyl.)	76044	+35	76150	+35	
	76074	+50	76187	+50	
Vitara short (Diesel+V6)	76074	+35	76144	+35	
	76050	+50	76150	+50	
Vitara short (gas, 4 cyl.)	76074	+35	76144	+35	
	76074	+50	76150	+50	





** springs only









	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
			66123			









	Body-Lift-Kit • Body lift kit • Ensemble de rehausse de caisse • Kit Body Lift para levantar la carrocería • Kit body lift			
		TÜV		mm
		o.k.	99250	+50




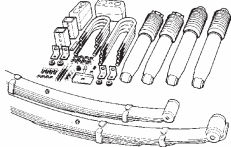




	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
		80102			
	differential lowering kit (gas, 4cyl.)	16737			
	mounting Kit (gas, 4cyl.)		17872		+50/+100
	mounting kit (Diesel+V6)		17874		+50/+100
	differential lowering kit (Diesel+V6)		16739		
adapter triangular control arm			16864		

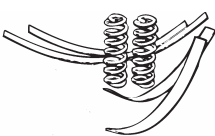



	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
				comfort	sport	comfort	sport	
		0-40			57690			59380
	50-85			59710			58740	







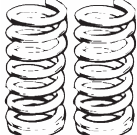

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport	comfort	sport	
		0-30			59510		59300	












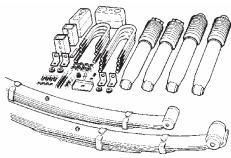





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40			59510		59760	59800
		50-60			59510		59540	59770
		100		58630			58610	58240










	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
				S19219		2	59510		2	58690
		+50/60	o.k.			1	16749	 <td>1</td> <td>76111</td>	1	76111





	Tieferlegungsfahrwerke • suspension lowering kits • ensemble de rebaisser suspension • rebajada suspensioe • Abbassandosi									
		mm		TÜV						
					S19229		2	59510		2
		-30/-45	E	o.k.				 <td>1</td> <td>76110</td>	1	76110





	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle					
				mm		mm
					76111	
				76110		-45

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
1979-1983	0-40			57690		59390	58920	
	50-85			59710			58450	
1984-1997	0-40			57690		58530	59610	
	50-85			59710			58740	

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato										
		mm	TÜV								
1979-1983	+85	---	S03329		2	59710		2	58450		
					1	77652		1	31552		
					1	77052		1	17730		
1984-1997	+85	---	S03339		2	59710		2	58740		
					1	77652		1	31552		
					1	77052		1	17730		








	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
						
tm/OE			13639		13640	










	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti					
						mm
		15832		15832		

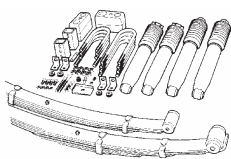








	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
		77652 r	+85		
		77052 l	+85		

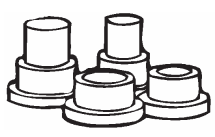



«Auto_vorne» = «Drehstab»









«Auto_hinten» = 










	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			59510		59300	59560
		40-70					58530	59610
		100			58630		58740	58770





	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
		+100	o.k.	S03419		2	58630		2	58740
						1	TPF		1	TPR

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
						
			13659			

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti			
				mm
			15824	+75







	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
			comfort	sport		comfort	sport	
		0-30		59510	r		59610	
					l		59560	
		40-70			 r	58740	58770	
					 l	58530	59610	
		80-110			 r	58220	59940	
					 l	58740	58770	

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
						
			13659			







	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti			
				mm
				15832










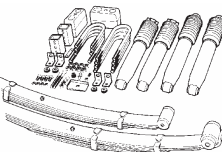

«Auto_vorne» = «Drehstab»







«Auto_hinten» = 





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori						
		mm					
			comfort	sport	comfort	sport	
		0-30	50120	---		59560	
		40-70	---	---		58530 59610	
		80-110	---	---		58740 58770	




	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
			15832		










	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40		58380	58410		58790	59390
		50-80		58900	58600		58890	58510













	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
				S06219		2	58600		2	58890
Softtop	+60	o.k.			2	77013		r.	1	77613
					1	17780		l.	1	77113











	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre						
							
75-80 tm springs		13635		13635		13652	13652
75-80 OE springs		13662		13662		13661	13661











	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
75-80		15833		15834	

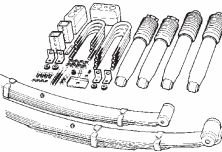



	Blattfedern • leaf springs • ressorts á lames • Ballestas • Balestre				
			mm		mm
75-80		77013	+60	77113 l	+60
				77613 r	+60




	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
					
					
			66160		




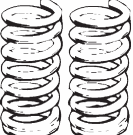

	leaf kit • leaf kit • kit lames additionnelles • kit de hoja adicional de ballestas • kit foglio balestre									
		kg								
					#			#		
Hardtop	OE					 l	77113	06/2008		31531
						 r	77613	06/2008		
Softtop	+150					 l	77113	06/2008		31531
						 r	77613	06/2008		
	+150		77013	06/2008	31532					



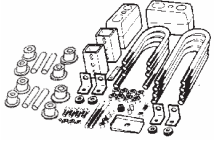


	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30			54500			54510
		40-70			54300			54310
		80-100		54280				54290
		100-130						54270







	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Assesto Rialzato									
		mm	TÜV							
				S58319		2	54300		2	54310
		+75	o.k.			1	76068		1	76168
									1	17774






	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspensión • Molle				
			mm		mm
		76068	+75	76168	+75




	Lenkungs­dämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
		66130				







	Montagesatz • mounting kit • ensemble pièces de montage • kit de componentes de montaje • kit di montaggio				
					mm
			17774		+75
	Excenter bushing kit		13634		










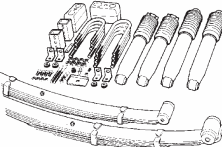

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
				comfort	sport	comfort	sport	
		0-30			50070		58120	57000
	40-50			50070		59760	59800	
	60-70					59760	59800	








	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-25					58680	58850
	30-50					58360	59880	





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
			comfort	sport	comfort	sport		
		0-20	---	---		58680	58850	
	30-60	---	---		58680	58850		





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
				comfort	sport	comfort	sport	
		0-40		58380	58410		58790	59390
	50-80	of	58900	58600	of	58890	58510	









	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40		58380	58410		58790	59390
		50-80		58900	58600		58890	58510














	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato										
		mm	TÜV								
	Softtop	+60	o.k.	S06229		2	58600		2	58890	
					 <td>2</td> <td>77013</td> <td> <td>r.</td> <td>1</td> <td>77613</td> </td>	2	77013	 <td>r.</td> <td>1</td> <td>77613</td>	r.	1	77613
					1	17781	 <td>l.</td> <td>1</td> <td>77113</td>	l.	1	77113	







	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
	tm/OE	13816	13816			










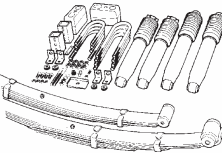

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
				mm	
		15835	15836		






	Blattfedern • leaf springs • ressorts á lames • Ballestas • Balestre				
			mm		mm
		77013	+60	77113 l	+60
				77613 r	+60





	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
					
					
				66160	





	leaf kit • leaf kit • kit lames additionnelles • kit de hoja adicional de ballestas • kit foglio balestre									
		kg								
		OE		#			#			
Hardtop	OE					77113	06/2008		31531	
						77613	06/2008		31531	
Softtop	+150					77113	06/2008		31531	
						77613	06/2008		31531	
	+150		77013	06/2008	31532					










	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40		59540				59560
		50-80		58690	59790		59380	59740










	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
				S46319		2	58690		2	59380
		+70	---		 <td>2</td> <td>77008</td> <td> <td>2</td> <td>77108</td> </td>	2	77008	 <td>2</td> <td>77108</td>	2	77108
								 <td>1</td> <td>17777</td>	1	17777







	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre						
							
	tm/OE	13816	13816				










	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti					
						mm
		15847		15848		









	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
		77008	+70	77108	+70












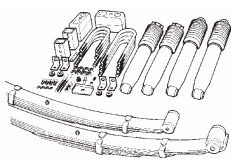

	leaf kit • leaf kit • kit lames additionnelles • kit de hoja adicional de ballestas • kit foglio balestre							
		kg						
				#			#	
			77008		31534			
		+150				77108		31531
		+100						





	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
		66130				

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20		59540			58740	59690
	30-50		58690	59790		58740	59690	





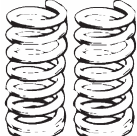







	Lenkungs­dämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
		66130				











	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30		59870	57660		59830	56860
	40-70		57260	54580		57270	54390	
	70-100		59840	54250		59310	54410	

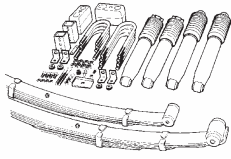



	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
	comfort	+50	o.k.	S46229		2	57260		2	57270
						1	76045		1	76145
sport	+50	o.k.	S46239		2	54580		2	54390	
					1	76045		1	76145	







	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspensión • Molle				
			mm		mm
		76045	+50	76145	+50

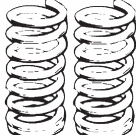



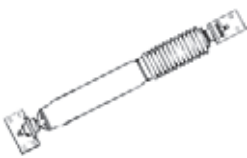

	Lenkungsämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
		66130				










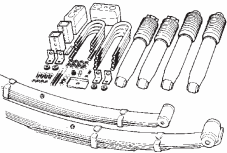

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40		58580		 r		57030
						 l		56670
		50-80		59550		 r	58530	
						 l	58320	
		90-110		59820		 r	58740	
						 l	59760	








	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
		+50	o.k.	S46219		2	59550	 r.	1	58530
								 l.	1	58320
						1	76019		1	76119





	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
		76019	+50	76119	+50





	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo				
					
		66130			






	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
- 10/1985		0-40		59760	59800		59390	58920
- 10/1985		50-80		58690	59770		58450	58870







	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
				S12319		2	58690		2	58450
		+75	o.k.		 <td>r. 1</td> <td>77605</td> <td> <td>2</td> <td>77105</td> </td>	r. 1	77605	 <td>2</td> <td>77105</td>	2	77105
					 <td>l. 1</td> <td>77005</td> <td></td> <td></td> <td>17777</td>	l. 1	77005			17777











	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
	tm/OE	13816	13816			

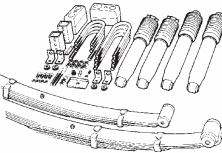






	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					
		15847	15848		
					mm





	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
		77005l	+75	77105	+75
		77605r	+75		





	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
		66130				









	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
10/1985 -		0-40		59760	59800		59300	
10/1985 -		50-80		58690	59770		58530	59610







	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
		+75	o.k.	S12329		2	58690		2	58530
						r. 1	77605		2	77105
						l. 1	77005			17777











	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
		13816	13816			

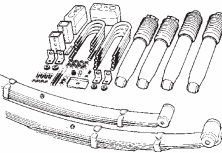





	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
		15847	15848		





	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
		77005l	+75	77105	+75
		77605r	+75		





	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
		66130				











	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40		59540				59560
		50-70		58690	59790		59380	59740













	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
				S46319		2	58690		2	59380
70-73 only	+60	---			2	77008		2	77108	
								1	17777	







	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
	tm/OE	13816	13816			

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
			15847	15848	










	Blattfedern • leaf springs • ressorts à lames • Ballestas • Balestre				
			mm		mm
		77008	+60	77108	+60






	leaf kit • leaf kit • kit lames additionnelles • kit de hoja adicional de ballestas • kit foglio balestre							
		kg						
				#			#	
	70-73	+150		77008	31534			
		+100				77108		31531








	Lenkungsdämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
		66130				




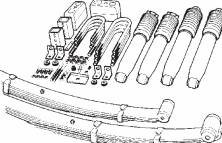



	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-20			58580		59380	59740
	30-50		59640	59330		58740	59690	


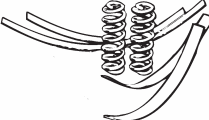


	Lenkungs­dämpfer • steering stabilizer • amortisseur de direction • amortiguador de dirección • ammortizzatore di sterzo					
						
						
		66130				





	Büchsen­sätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
						
		13634				

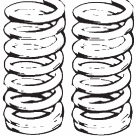



	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-30		---	---			59490
	40-60		---	---			58710	




	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato								
		mm	TÜV						
	+40	o.k.	S49219		1	17791		2	58710
								1	76131







	Tieferlegungsfahrwerke • suspension lowering kits • ensemble de rebaissier suspension • rebajada suspensioe • Abbassandosi								
		mm	TÜV						
	-35	o.k.	S49110		1	76030		1	76130












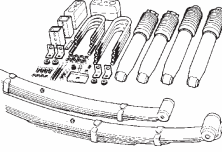

	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
			76030	-35	76130
				76131	+40





	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
	i	mm						
			comfort	sport	comfort	sport		
		0-30	---	---			59490	
	40-60	---	---			58710		





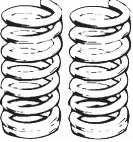

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
		0-40					54240	










	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori						
	i	mm					
			comfort	sport	comfort	sport	
LT 28/35	0-35	58500			58980		
	40-80				Qf	58940	
LT 40/55	0-35	58330			58980		
	40-70	58390			Qf	58940	

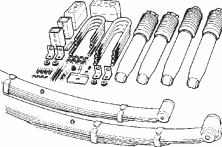








	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
2WD		0-30						59370
2WD		40-70						59620
Syncro		0-20		50080	50090			58810
		20-40		50080	50090		57980	57060



	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
84-92	+40	o.k.	S60219		2	50080		2	57980	
					1	76081		1	76181	
84-92 HD 400kg extra load	+40	o.k.	S60229		2	50090		2	57060	
					1	76081		1	76183	

	Schraubenfedern • coil springs • ressorts hélicoidal • Muelles de suspension • Molle				
			mm		mm
OE weight		76081	+40	76181	+40
				76183	HD +40

	Stoßdämpfer • shock absorbers • amortisseurs • Amortiguadores • Ammortizzatori							
		mm						
				comfort	sport		comfort	sport
4WD	0-30				59510		59300	59560
4WD	40-70						58530	59610
4WD	100				58630		58740	58770

	Höherlegungsfahrwerke • suspension lift kits • ensemble rehausse de suspension • kit de elevacion de suspensión • Asseto Rialzato									
		mm	TÜV							
4WD	+100	o.k.	S03419		2	58630		2	58740	
					1	TPF		1	TPR	

	Büchensätze • bushing kit • kit SilentBlocs • kits de silenblocs • kit boccole per balestre					
						
						
				13659		

	Bridensatz • U-Bolt Kit • kit étriers • kits de abarcones • kit cavallotti				
					mm
				15824	+75